

Drapery Hardware West

TUBULAR MOTORS

> 100% genuine italian

DRAPERY HARDWARE WEST 26732 Oak Ave, Unit J Canyon Country, CA 91351 Tel: 661-298-7030 Fax: 661-244-4978 info@dhwonline.com





Models	XSDC3EZ030B
Torque	1.1 Nm
Speed	30 rpm
Power	15 W
Amps	1.40 A
Limit switch	Electronic
Max turns	70

XSDC3EZ226B	
2 Nm	
26 rpm	
18 W	
1.60 A	
Electronic	
70	

TECHNICAL DATA


Voltage	12 VDC
Duty rating	6 min
Radio frequency	434.15 MHz
Protection	IP30
Working temperature	14°F / 104°F
Insulation class	III


DIMENSIONS in

 Model
 A

 XSDC3EZ030B
 21.06

 XSDC3EZ226B
 21.65

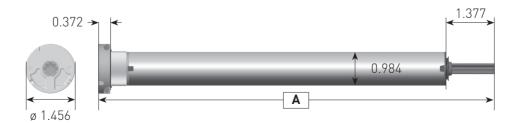

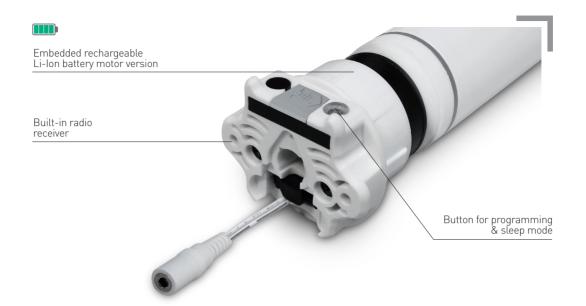

Models	XSDC5EZ326B
Torque	3 Nm
Speed	26 rpm
Power	32 W
Amps	2.9 A
Limit switch	Electronic
Max turns	55

XSDC5EZ615B	
6 Nm	
15 rpm	
32 W	
2.9 A	
Electronic	
55	

TECHNICAL DATA


Voltage	12 VDC
Duty rating	6 min
Radio frequency	434.15 MHz
Protection	IP30
Working temperature	14°F / 104°F
Insulation class	III

DIMENSIONS in

Model A XSDC5EZ326B 22,5591

22,6772

XSDC5EZ615B

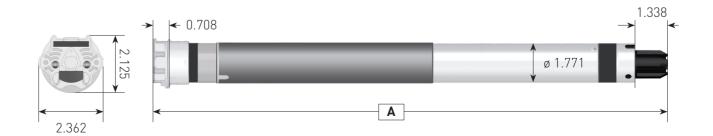






Models	XSDC3EZ128
Torque	1.5 Nm
Speed	28 rpm
Power	22 W
Amps	0.90 A
Limit switch	Electronic
Max turns	35


XSDC3EZ228	
2 Nm	
28 rpm	
25 W	
1.10 A	
Electronic	
35	

TECHNICAL DATA

Voltage	24 VDC
Duty rating	6 min
Radio frequency	434.15 MHz
Protection	IP30
Working temperature	14°F / 104°F
Insulation class	III

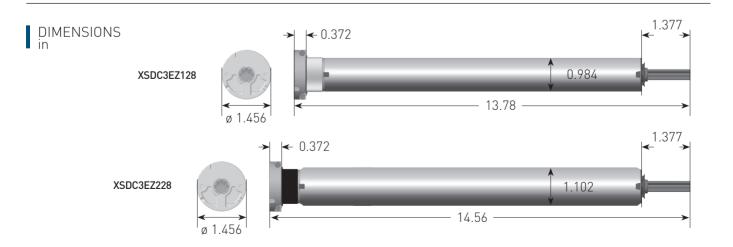



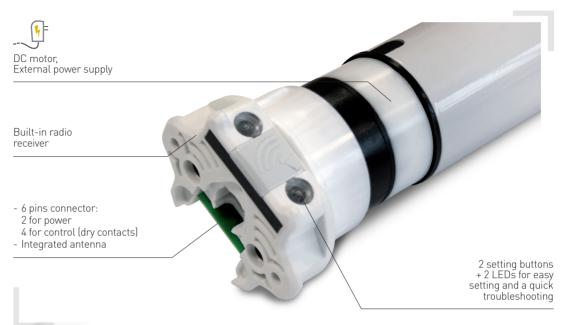

Models	XSDC5EZ428
Torque	4 Nm
Speed	28 rpm
Power	46 W
Amps	2 A
Limit switch	Electronic
Max turns	55

XSDC5EZ815
8 Nm
15 rpm
60 W
2.5 A
Electronic
34


TECHNICAL DATA

Voltage	24 VDC
Duty rating	6 min
Radio frequency	434.15 MHz
Protection	IP30
Working temperature	14°F/104°F
Insulation class	

DIMENSIONS in

Model A

XSDC5EZ428 20.19

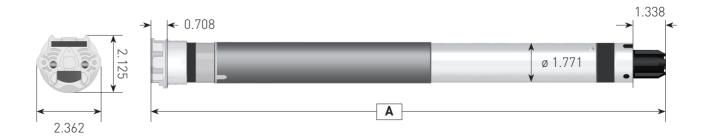

ACCESSORIES

Motors
XSDC3EZ228B
XSDC3EZ030B

TRASDC3.120 Switching power supply 2 Amps

Motors

XSDC3EZ128 XSDC3FZ228



TRAS.120 Switching power supply 2,5 Amps



FLAX14W007.L1 (6.102 in) FLAX14W007.L2 (48.03 in) FLAX14W007.L3 (96.06 in)

Power cord extension with plugs (for DC battery motors)



➤ FLAX13W070

Plug-in power cable for XSC50 motor without dry contacts



► FLAX13W065



POWER DISTRIBUTION PANELS 24V DC

ARM4

Power supply for 4 XSDC30 motors

Technical details

Input voltage	100-240Vac 50/60Hz
Amps	2.1 A
Output	4.5 A, 100 W
Motor connections	4
Working temperature	-10°F /+158°F
Dimensions	5.236 x 8.188 x 3.149 in



ARM5

Power supply for 5 XSDC50 motors with dry contact input for each motor and for group control

Technical details

Input voltage	100-240Vac 50/60Hz
Amps	3.0 A
Output	10 A, 250 W
Motor connections	5 (DC power) + 5 (Dry contact)
Working temperature	-10°F /+158°F
Protection fuse	4.0 A
Dimensions	12.008 x 8.268 x 4.724 in





SMART EATURES

- ➤ Easy limit adjustment via the setting tool with no need to access the motor head
- ▶ High accuracy of limits positions. The encoded magnet enclosed in the motor crown guarantees a perfect tracking of rotations of the shade.
- ➤ The capability of connecting in parallel several Gaposa motors without any additional switching units (relays).
- ➤ Motors can be bridged and controlled as a group by a single wall switch (with adequate amperage.)
- ➤ Automatic safety power cut-off during upward rotation (if the shade gets stuck while raising.)



MAIN EATURES

Models	XS4E334
Torque	3 Nm
Speed	34 rpm
Rated current	0.90 A
Limit switch max turns	160

XS4E624
6 Nm
24 rpm
1.20 A
160


ECHNICAL DATA

Power Supply	120 VAC / 60 Hz	
Working temperature	14°F / 104°F	
Duty rating	45 sec ON / 1 min OFF	
Radio frequency (type	434.15 MHz	
Protection	IP44	



DIMENSIONS in




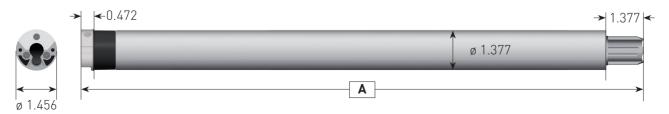

XS4EZ Electronic encoded type with built-in radio receiver

SMART EATURES

- ➤ Easy limit setting via radio
- ➤ Secure 434.15 MHz radio transmission
- ➤ Easy set up of group controls
- ▶ Up and down directions syncronized while setting the limits
- ➤ Noiseless soft brake

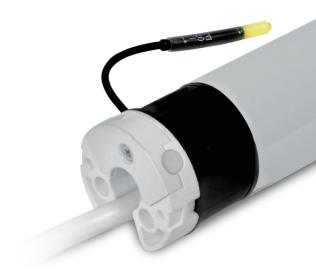


MAIN EATURES

Models	XS4EZ334
Torque	3 Nm
Speed	34 rpm
Rated current	0.90 A
Limit switch max turns	160
Limit switch max turns	160

XS4EZ624	
6 Nm	
24 rpm	
1.20 A	
160	


ECHNICAL DATA

Power Supply	120 VAC / 60 Hz	
Working temperature	14°F/104°F	
Duty rating	45 sec ON / 1 min OFF	
Radio frequency	434.15 MHz	
Protection	IP44	

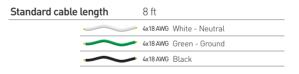

DIMENSIONS in

Model	Α	Model	Α
XS4EZ334	23.66	XS4EZ624	25.03

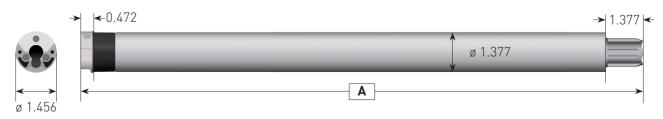





- ▶ Easy limit setting via radio
- ➤ Secure 434.15 MHz radio transmission
- ➤ Easy set up of group controls
- ▶ Up and down directions syncronized while setting the limits
- ▶ Wireless connection with climatic sensors
- ➤ Noiseless soft brake
- ▶ Plug-in cable



Models	XS5EZ525
Torque	5 Nm
Speed	25 rpm
Rated current	0.9 A
Limit switch max turns	80

Power Supply	120 VAC / 60 Hz
Working temperature	14°F/104°F
Duty rating	45 sec ON / 1 min OFF
Radio frequency	434.15 MHz
Protection	IP44

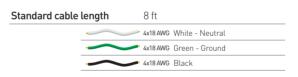

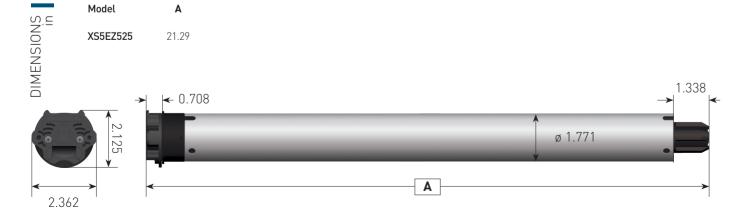


XQ5EZ Electronic encoded type with built-in radio receiver


- ➤ Easy limit setting via radio
- ➤ Secure 434.15 MHz radio transmission
- ➤ Easy set up of group controls
- ▶ Up and down directions syncronized while setting the limits
- ➤ Wireless connection with climatic sensors
- ➤ Noiseless soft brake
- ▶ Plug-in cable



Models	XQ5EZ790 S HSM
Torque	7 Nm
Speed	90 rpm
Rated current	1.80 A
Limit switch max turns	80

Power Supply	120 VAC / 60 Hz	
Working temperature	14°F/104°F	
Duty rating	45 sec ON / 1 min OFF	
Radio frequency	434.15 MHz	
Protection	IP44	

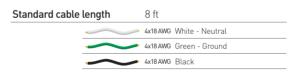

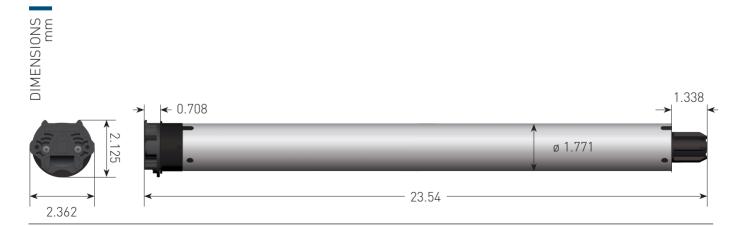



- ▶ Easy limit adjustment via the setting tool with no need to access the motor head
- ▶ High accuracy of limits positions. The encoded magnet enclosed in the motor crown guarantees a perfect tracking of rotations of the shade.
- ▶ The capability of connecting in parallel several Gaposa motors without any additional switching units (relays).
- ▶ Motors can be bridged and controlled as a group by a single wall switch (with adequate amperage.)
- ▶ Automatic safety power cut-off during upward rotation (if the shade gets stuck while raising.)



Models	XQ5E634
Torque	6 Nm
Speed	34 rpm
Rated current	0.90 A
Limit switch max turns	80


XQ5E934
9 Nm
34 rpm
1.10 A
80


Model

Power Supply	120 VAC / 60 Hz
Working temperature	14°F / 104°F
Duty rating	45 sec ON / 1 min OFF
Protection	IP44

Model

Α

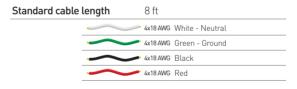

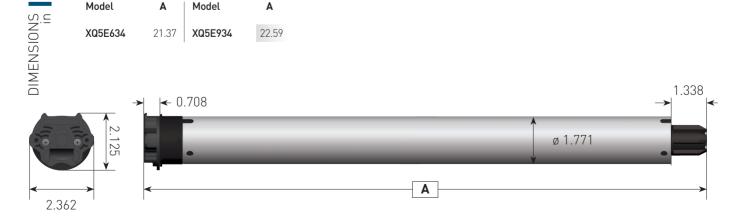





- ➤ Easy limit setting via radio
- ➤ Secure 434.15 MHz radio transmission
- ► Easy set up of group controls
- ▶ Up and down directions syncronized while setting the limits
- ▶ Wireless connection with climatic sensors
- ➤ Noiseless soft brake
- ▶ Plug-in cable



XQ5EZ934
9 Nm
34 rpm
1.10 A
80

Power Supply	120 VAC / 60 Hz	
Working temperature	14°F/104°F	
Duty rating	45 sec ON / 1 min OFF	
Radio frequency	434.15 MHz	
Protection	IP44	

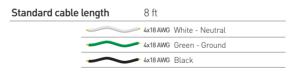

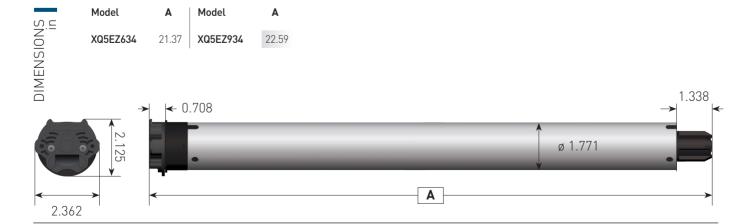

ADAPTERS

■ **DC30** range motors


Drive wheel Crown adapter





Code: AX3.01P138 Tube: Round tube 1"-½ /38 mm



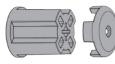

AXRRF3 ADAPTOR FROM XSDC30 TO XS/XQ40 MOTOR CROWN

■ 40 range motors

Drive wheel	Crown adapter	Drive wheel	Crown adapter	
0	Code: AX4.01P061 Tube: Round for 2"/50mm	0		Code: AX4.01P078 Tube: Round for 48mm
Code: AXRRF4 ADAPTOR FROM XQ40 TO XQ50 MOTOR CROWN				

■ **50** range motors

Drive wheel	Crown adapter		Drive wheel	Crown adapter	
		Code: AXR50 Tube: Round 2"/50 mm			Code: AXO6.EC Tube: Round 2"-1/2/73 mm
		Code: AX5.01P079 Tube: Round 2"/50 mm with grooves			Code: AX5.01P205 Tube: Round 3"-1/4/83 mm





Code: AXGS78M Tube: 2.75" with grooves



Inspired by the elegant and modern design of the Smart Line range, the new transmitter SMART16 is the latest addition of this product line. It can control up to 16 channels in a simple and userfriendly way, through its comfortable LCD display

QCTZ16SY / QCTZ16Y

A 16 channel remote with LCD display

- 16 channels for individual control
- Possibility to create and control 8 custom groups in addition to all channels
- Hide the unused channels
- Magnetic wall mount bracket
- Timer functions (only for QCTZ16**S**Y)






QCTZ16SY

QCTZ16Y

Technical details

Channels	16
Frequency	434.15 MHz
Power supply	3V - CR2450
Battery life	2 years
Radiated power	0,150 mW
Protection rate	IP30
Coverage (int/ext)	65 / 600 ft
Encoding	RC Gaposa
Working temperature	14°F / 104°F

Dimensions (in)

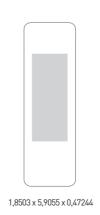

Magnetic wall support (included)



QCTB



QCTZ01KT



QCTZ04KB







Technical details

Channels	1 to 5
Frequency	434.15 MHz
Power supply	3V mod. CR2032
Battery life	2 years
Radiated power	0,150 mW
Protection rate	IP40
Coverage (int/ext)	65 / 600 ft
Encoding	RC Gaposa
Working temperature	14°F / 104°F

Dimensions (in)



Magnetic wall support (not included)

Transmitters



QCZTAB is a portable surface-mounted transmitter with interchangeable frame. It is available in 2 versions: single channel or four channels. Frames are available in different colors.

QCZTAB

1 channel transmitter



4 channels transmitter





Available colors

Available in different combinations of finishes: black, white, red, silver, yellow and blue.













Wall bracket

QCZTAB is a wall mounted transmitter as well as a hand-held device if you slide it off its bracket.





Technical details

	QCZTAB	QCZTAB4	
Channels	1	4	
Frequency (MHz)	434,15		
Power supply	3V mod. CR2430		
Battery life	2 year		
Radiated power	0,150 mW		
Protection rate	IP40		
Coverage (int/ext)	65/600ft		
Encoding	RC Gaposa		
Working temperature (°F)	14°F / 104°F		
Dimensions (in)	3.14 x 3.14 x 0.55		
Weight (lbs)	0.12		



A collection of remote controls for interior window coverings and exterior solar protections. They are either single channel or 5 channels and each channel allows users to operate their motorized products. Each channel can control one individual motor or one group of motors.

Hand-held remotes

1 Channel

Wireless Wall Switches

1 Channel









QCTZ01H

QCTZ01Y

QCTZ01W

QCTZ01D

Hand-held remotes

5 Channels with Preset/All pushbuttons

Wireless Wall Switches

5 Channels with Preset/All pushbuttons









QCTZ02H QCTZ02Y

QCTZ02W

QCTZ02D

Hand-held remotes


1 channel version with "Tilting" function and "Preset" pushbutton



Wireless Wall Switches

1 Channel version with "Tilting" function and "Preset" pushbutton



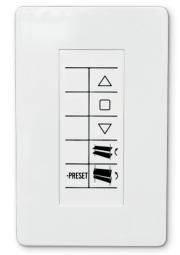

QCTZ03H

QCTZ03Y

QCTZ03W

QCTZ03D

Hand-held remotes

5 Channels with "Tilting" function





Wireless Wall Switches

5 Channels with "Tilting" function





QCTZ04H

QCTZ04Y


QCTZ04W

QCTZ04D

Technical details

Channels	1 to 5
Frequency	434.15 MHz
Power supply	3V mod. CR2032
Battery life	2 years
Radiated power	0,150 mW
Protection rate	IP40
Coverage (int/ext)	65 / 600 ft
Encoding	RC Gaposa
Working temperature	14°F / 104°F


Dimensions (in)

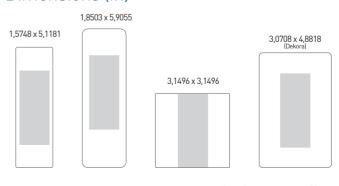

Note: Magnetic wall support (QCTB) is included in the " \pmb{Y} " models



Home automation

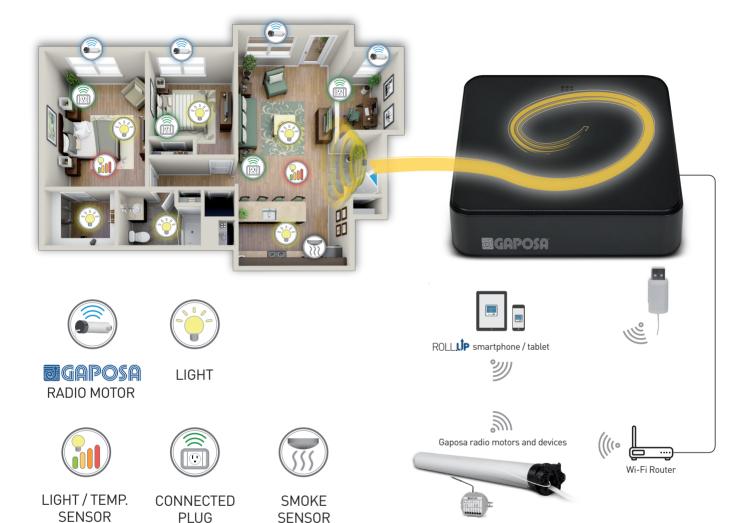

Features

- Information securely stored locally
- 3 types of scenarios for an ultra simple set up
- Simple and fast installation
- Vacation scenario with random feature
- Designed for Smartphone or tablets
- No limits to the number of scenes and connected devices
- Autonomous server does not use Cloud technology
- Free remote access without any subscription
- Amazon's Alexa compatible



Gaposa 3rd party integration via dry contacts with: *Lutron, Savant, Control4, Crestron*





1 channel



QCTZ36SDU

6 channels

Panels with integrated transmitter enables to interface a radio motors with a home automation system. In this way, the home automation system will control the radio motor(s) through the UP/STOP/DOWN signals.

Power supply	120V~ - 60 Hz (±10%)
Frequency	434.15 MHz
Fuse	315 mA
Protection rate	IP44
Working temp.	14°F / 104°F

RS232 integration + WiFi coming soon

Models

- linkIT-US8 8 channels (434.15 MHz)
- linkIT-US16 24 channels (434.15 MHz)

Control

- 16-24 blinds or groups per device
- Up Down Stop
- Intermediate position
- Tilting

Integrations

- RS232 via RJ9
- TC/IP/Wi-Fi (Q4, 2020)




Hardware

- Very small dimensions
- Visible feedback
- Exterior antenna for increased range
- LED for power

- Upgradable
- Interconnectable
- 5V power input

PROGRAMMING QUICK GUIDE

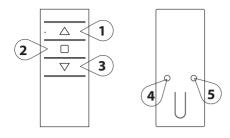


The buttons shown on the left are used to program the transmitters and specific channels. The programing button's (buttons 4 and 5) locations can be placed differently depending on the transmitter model. Shown in this guide is the Emitto Slim line transmitter.

UP (1) STOP (2) **DOWN (3)** the rolling shade/awning goes down

the motor lifts the rolling shade/awning up SYNC (4) LIMIT (5) the rolling shade/awning stops

program the transmitter set limits

CONNECT POWER TO THE MOTOR

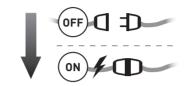

PROGRAMMING A TRANSMITTER (Sec. 1)


- 1 Press and hold SYNC button on the back of transmitter or the white button on the head of the motor until the motor starts
- 2 Check the motor rotation (UP or DOWN) then release the SYNC button or the white button (the motor now stops)
- 3 Within 5 seconds, press the corresponding button (UP if the motor turns upwards or **DOWN** if the motor turns downwards.) This will set the direction of the motor. If the incorrect button is pressed, the controls will be reversed. To fix, see Sec. 3.

Transmitter is now programmed

ADDING A NEW TRANSMITTER (Sec. 2)

- 1 Press and hold the SYNC button on the back of a transmitter **ALREADY** paired until the motor starts moving in one direction
- 2 Check the motor rotation (UP or DOWN) then release the SYNC button (the motor now stops)
- Within 5 seconds, press the corresponding button (UP if the motor turns upwards or **DOWN** if the motor turns downwards) on the NEW transmitter being added. This will set the direction of the motor. If the incorrect button is pressed, the controls will be reversed. To fix, see Sec. 3

Additional transmitter is now added

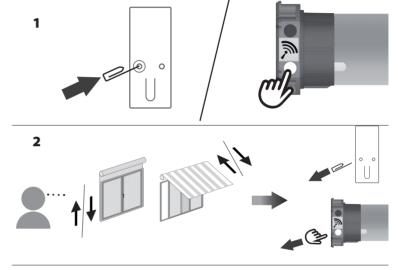




CHECKING / CHANGING DIRECTION (Sec. 3)

To check the direction, press the UP or DOWN button. The motor will go UP or DOWN accordingly, if the direction needs to be changed:


- 1 Press and hold the SYNC button on the back of transmitter until the motor starts moving
- 2 Press the STOP button; the motor makes a brief jog. The direction of the motor has been reversed

IMPORTANT: the change of direction of procedure must be performed before initiating the limit setting procedure, otherwise limits must be reset

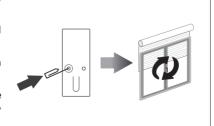

1

2

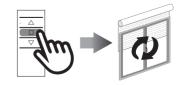

SETTING THE LIMITS (Sec. 4) IT IS MANDATORY TO SET THE "UP" LIMIT FIRST EVERY TIME


Run the motor to an intermediate position inbetween the two desired limits. The motor needs to move in the direction of the limit in order for the limit to be properly set.


1 Press and hold the LIMIT button on the back of transmitter until the motor makes a brief jog


Note: during "limit setting mode" the operations are in "deadman control" (The UP and DOWN buttons must be held down inorder to move the motor.)


- **2** Press and hold the UP button and run the motor to the desired UP limit position.
- **3** Press the STOP button to set the UP limit position. The motor makes a brief jog to confirm.
- **4** Press and hold the DOWN button and run the motor to the ù desired DOWN limit position
- **5** Press the STOP button to set the DOWN limit position. The motor makes a brief jog to confirm.

Note: Accurate limit setting can be performed by pressing the LIMIT button a second time: the motor will then will reduce its output speed, moving slowly in steps towards the desired limit. Always press the STOP button to set the limit position.

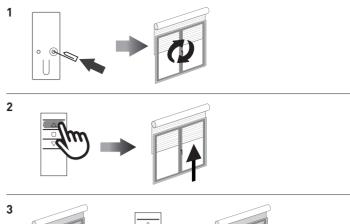

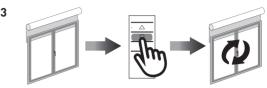

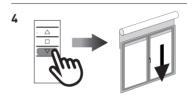

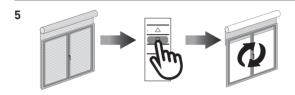

SETTING THE LIMITS INDIVIDUALLY (Sec. 5)


If the limits need to be changed after the initial limit setting procedure, it is possible to change the limit positions individually. One limit can be set without the other limit needing to be set. The motor can be in any postion to initiate the procedure.


TO CHANGE THE UP LIMIT:


1 From any point between the existing limits, press and hold both the LIMIT button and the UP button until the motor makes a brief jog.

Note:during "limit setting mode" the operations are in "deadman control" (The UP and DOWN buttons must be held down inorder to move the motor.)

- 2 Press and hold the UP button until the desired new UP limit is reached.
- **3** Press the STOP button to set the limit. The motor makes a brief jog to confirm. The new UP limit is set.

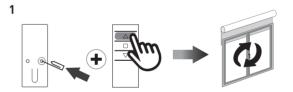

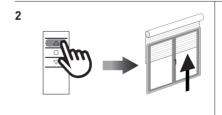

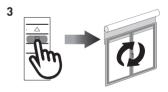



TO CHANGE THE DOWN LIMIT:


1 From any point between the existing limits, press and hold both the LIMIT button and the DOWN button until the motor makes a brief jog.


Note: during "limit setting mode" the operations are in "deadman control" (The UP and DOWN buttons must be held down inorder to move the motor.)

- 2 Press and hold the DOWN button until the desired new DOWN limit is reached
- **3** Press the STOP button to set the limit. The motor makes a brief jog to confirm. The new DOWN limit is set.

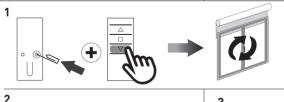

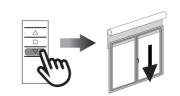

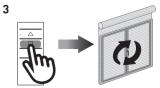


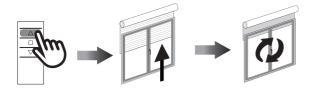

AUTOMATIC SETTING OF THE LIMITS (Sec. 6)

For limits set with torque sensor (mechanical stop of shutters or cassette awnings/shades), press and hold the UP button until the bottom bar hits the cassette or shutter box. A short jog will indicate that the UP position has been memorized. The same procedure can be followed for the DOWN limit but only for roller shutters.




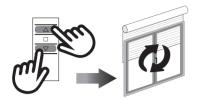

1. SETTING AN PREFERRED POSITION


Operate the motor to and stop it at the desired intermediate position, then press both the UP and DOWN buttons together until the motor makes a brief jog to confirm.

The intermediate position is now set.

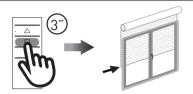

2. RECALLING THE PREFERRED POSITION

Press and hold the STOP button for 3 seconds: the motor will move to and stop at the intermediate position.

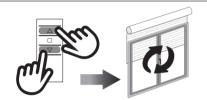

3. ERASING THE PREFERRED POSITION

Press both the UP and DOWN buttons until the motor makes a brief jog to confirm.


The intermediate position is now erased.



DELETING A TRANSMITTER OR A CHANNEL (Sec. 8)

Using the transmitter to be deleted press and hold both the SYNC and STOP buttons untill the motor makes a brief jog to confirm.

Only the transmitter used for this procedure has been deleted from motor memory

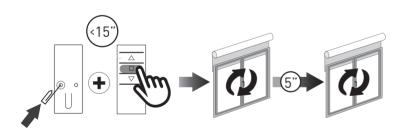


RESET TRANSMITTER MEMORY (Sec. 9) (DELETING ALL THE TRANSMITTERS OR CHANNELS OR SENSORS)

Option 1 - Using a programmed transmitter

Press and hold both the SYNC and STOP buttons for at least 15 seconds: to confim that the operation has completed, the motor first makes a brief jog and after 5 seconds it makes an additional jog. This operation will not be successful unless it makes both jogs.


Memory is now empty

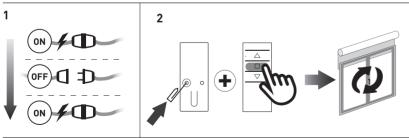

Option 2 - Using a new transmitter without ID (not paired).

- 1 Switch the power to the motor OFF, then switch it back ON.
- **2** Within 8 seconds, using any Gaposa transmitter, press and hold both the **SYNC** and **STOP** buttons until the motor makes a jog.

Memory is now empty

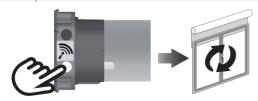

Option 3 - White button on the head of the motor

Press and hold the white button on the head of the motor until it makes a jog.

All transmitters have been erased.